 


DELL 3100 2 IN 1 CHROMEBOOK

GET TO KNOW YOUR DEVICE

Front View

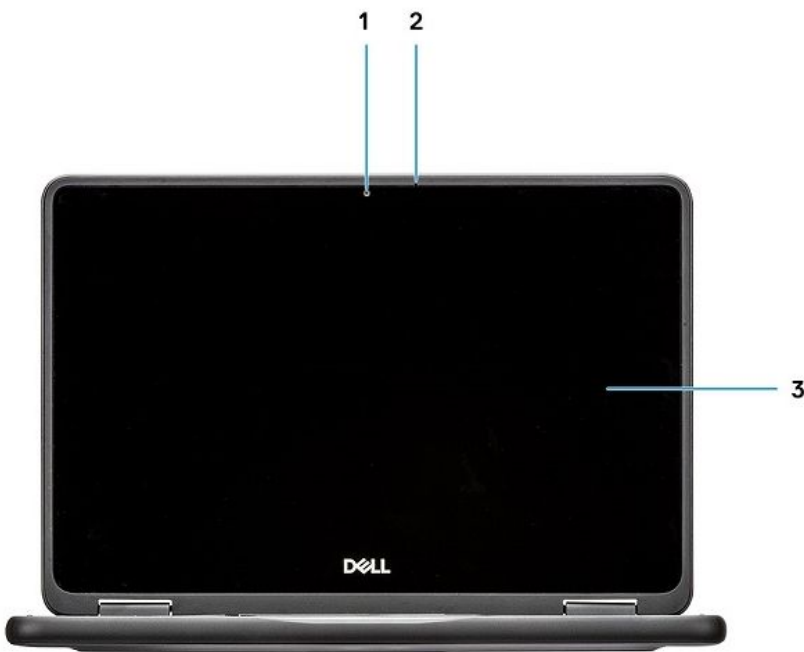

(Fig.1 Front View)

| | | | |
|---|---------------|---|------------|
| 1 | Camera | 2 | Microphone |
| 3 | Display Panel | | |


Top View



(Fig.2 Top view)

| | | | |
|----------|-----------------------|----------|------------------------------|
| 1 | Microphone (Optional) | 2 | Camera Status LED (Optional) |
| 3 | Camera (Optional) | 4 | Keyboard |
| 5 | Touchpad | | |

 
Bottom View

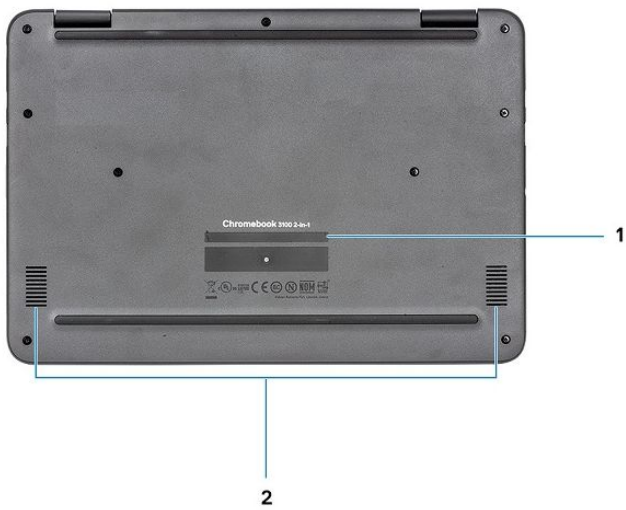

(Fig.3 Bottom View)

| | | | |
|----------|-------------------|----------|----------|
| 1 | Service Tag Label | 2 | Speakers |
|----------|-------------------|----------|----------|

 Left Hand Side View

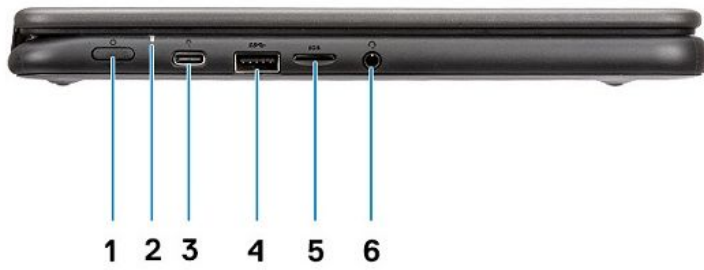

(Fig.4 Left Hand Side View)

| | | | |
|----------|---------------------------------------|----------|--------------------------|
| 1 | Power Button | 2 | Power/Battery Status LED |
| 3 | USB Type-C connector w/Power Delivery | 4 | USB 3.1 Gen1 connector |
| 5 | microSD card | 6 | Headset connector |

Right Hand Side View



(Fig.5 Right Hand Side View)

| | | | |
|----------|---------------------------------------|----------|------------------------|
| 1 | Volume Button | 2 | USB 3.1 Gen1 connector |
| 3 | USB Type-C connector w/Power Delivery | 4 | Wedge-Shaped lock slot |

AC Adapter View



 
(Fig.6 65W Type-C AC Adapter)

 
 
 
DELL 3100 2 IN 1 CHROMEBOOK SETUP

FOLLOW THESE DIRECTIONS CAREFULLY

STEP 1: Plug in and power on the chromebook




STEP 2: Connect to WIFI.

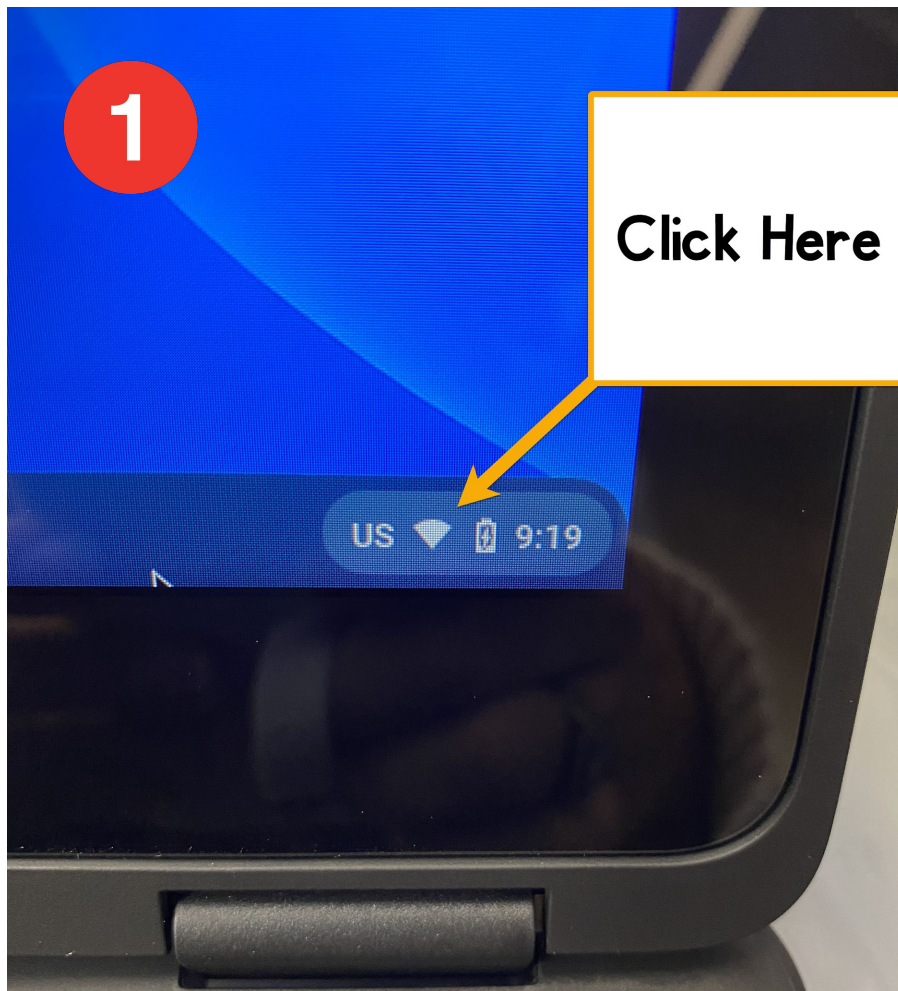

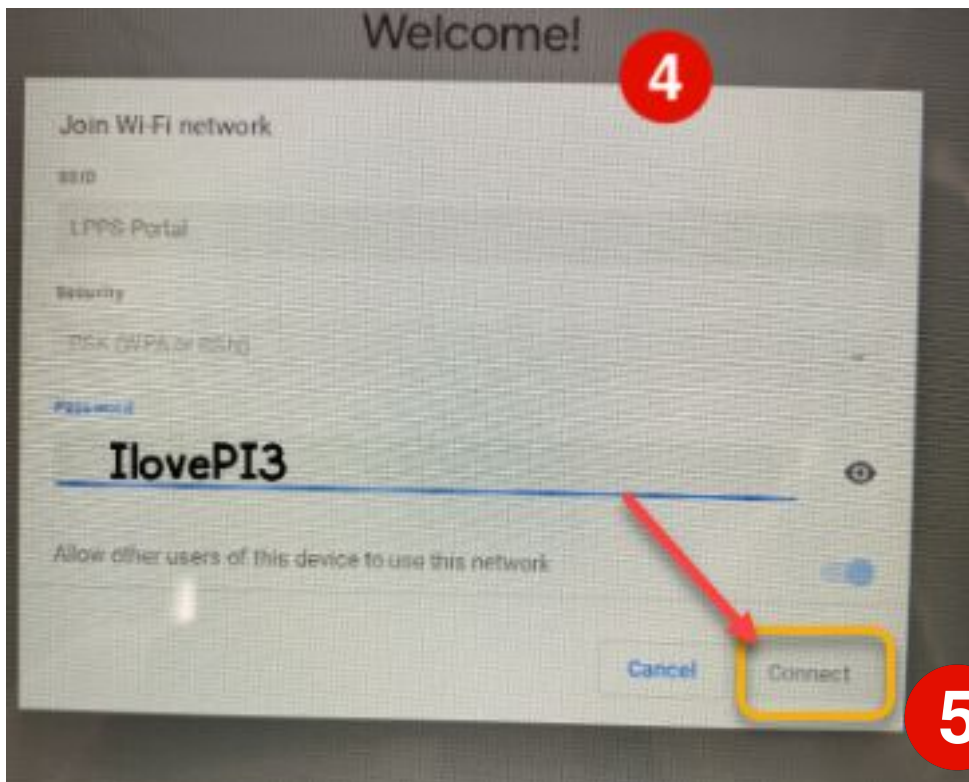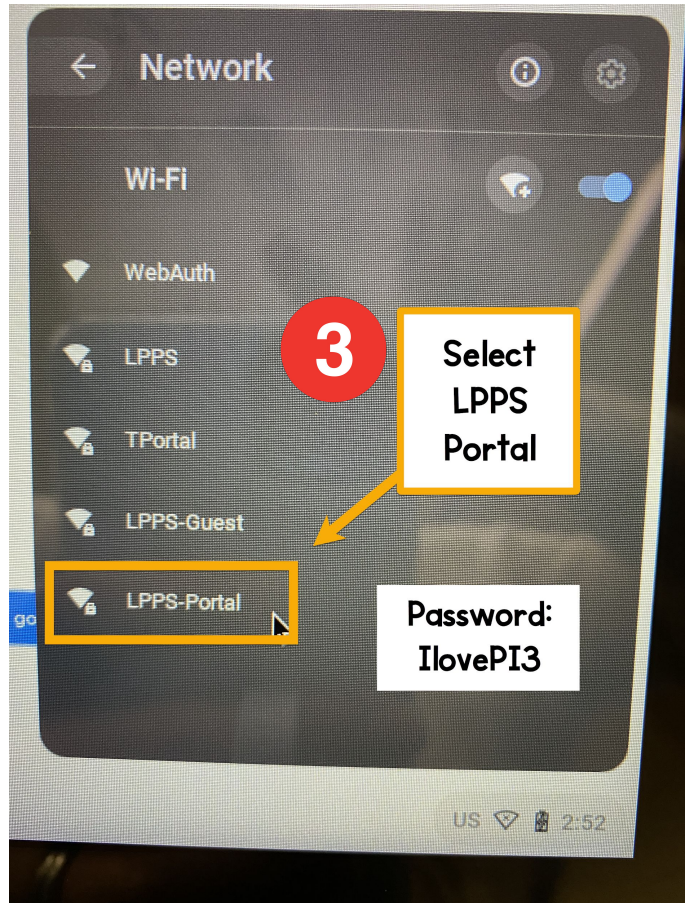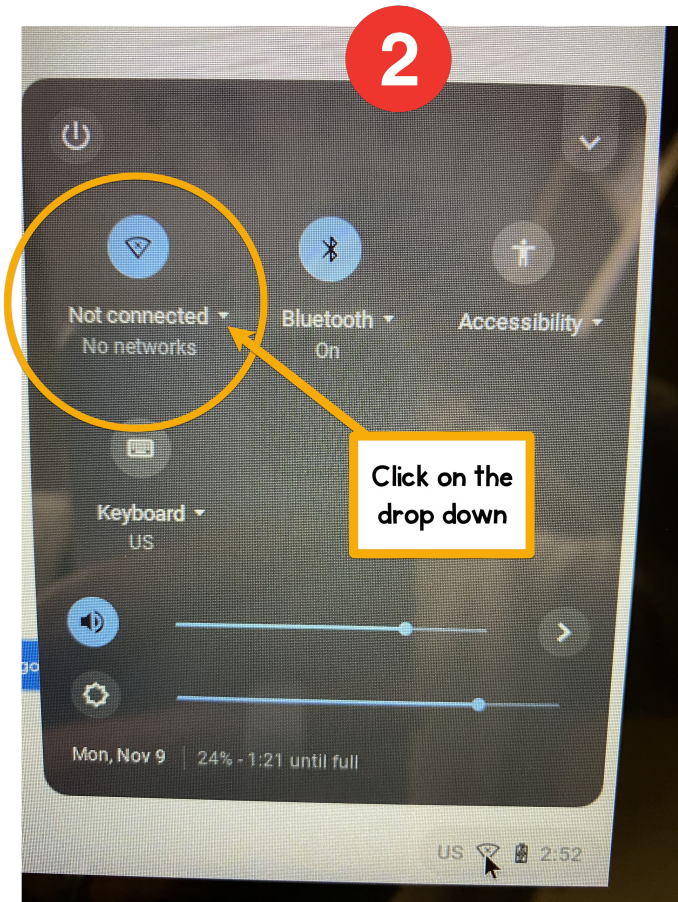



STEP 3: The Chromebooks need to be enrolled and logged in with **ENTERPRISE ENROLLMENT**.

   You will see the Welcome screen. Click on LET'S GO. From there you will need to accept the TERMS OF SERVICE.

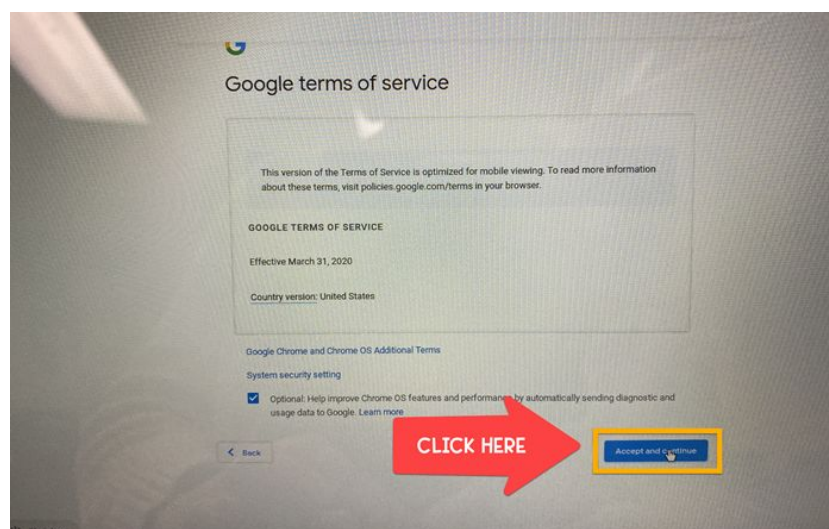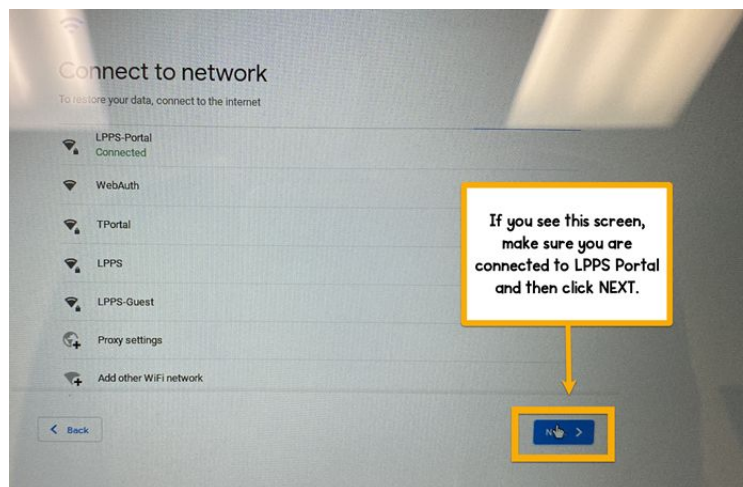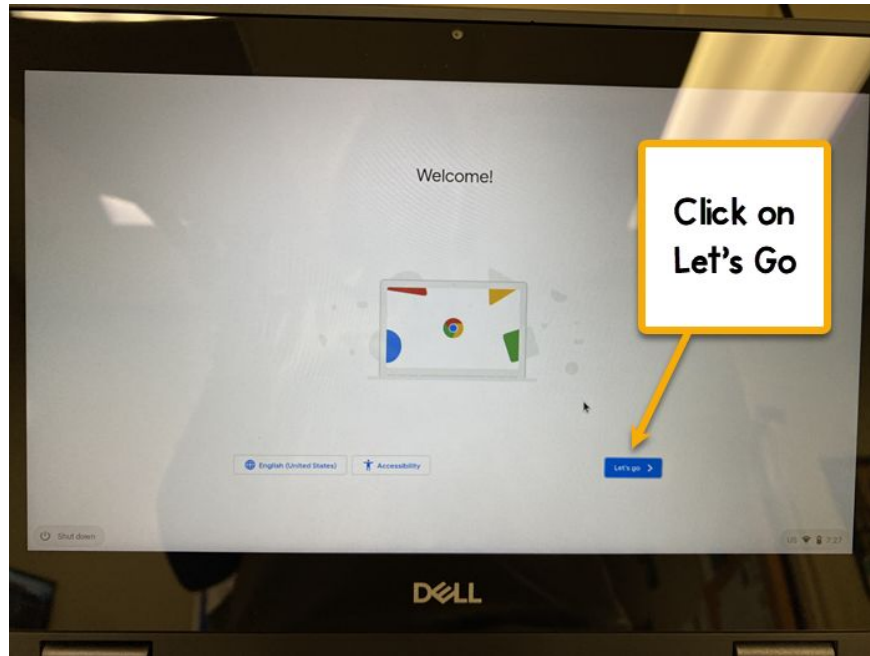


STEP 4: The Chromebooks need to be enrolled and logged in with **ENTERPRISE ENROLLMENT**.

  
On the next screen, if you see the words SIGN IN TO YOUR CHROMEBOOK, you MUST click on **MORE OPTIONS**.

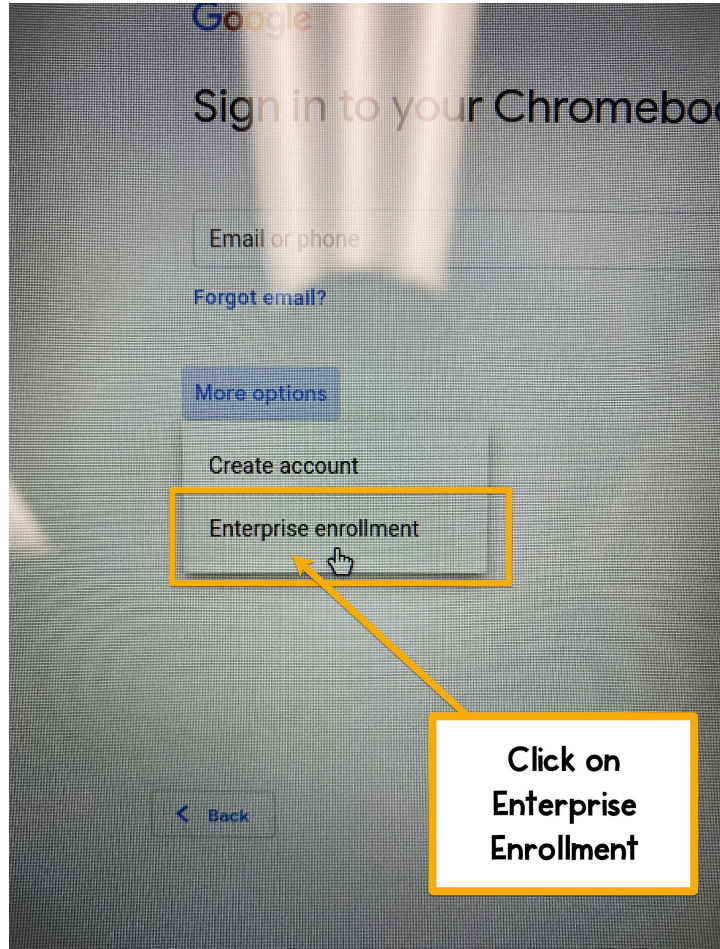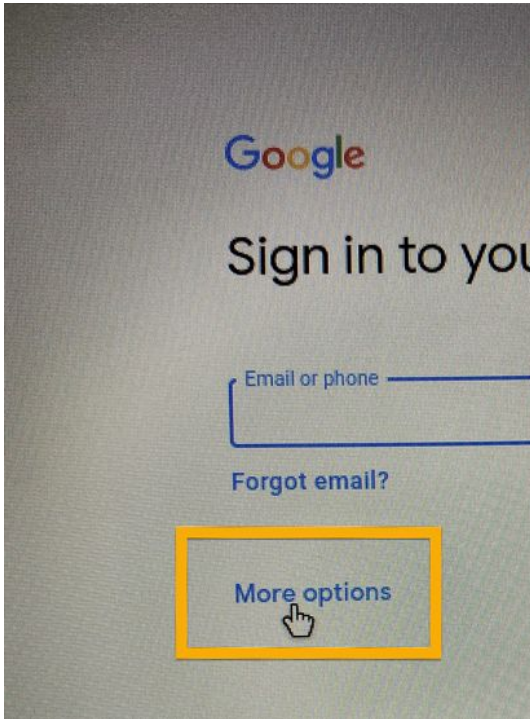



Click on Enterprise Enrollment

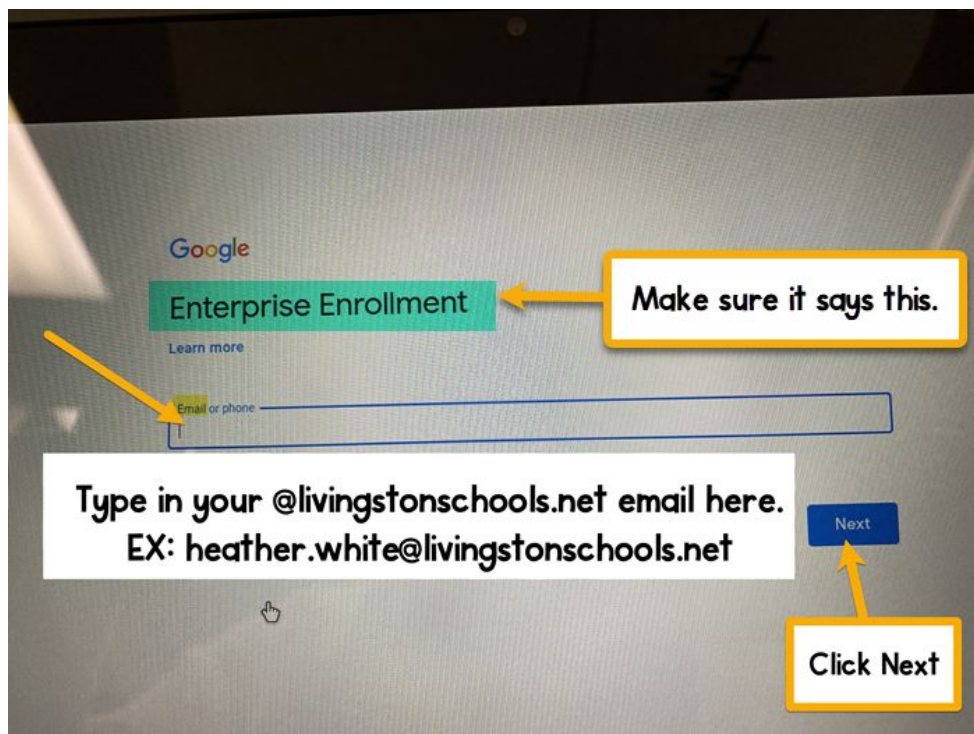 

 
STEP 5: The Chromebook will do what it needs to. When it is finished, you should see this screen. Click DONE.

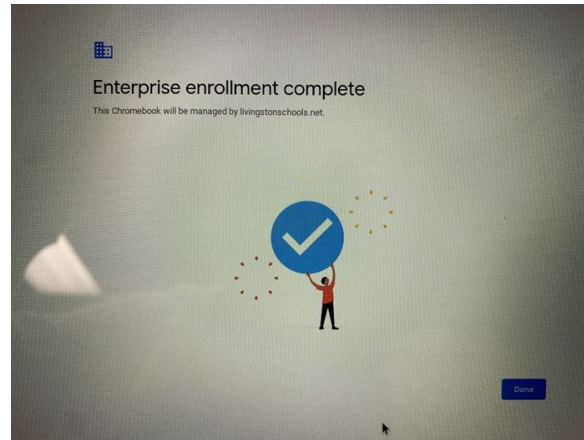

  
STEP 6: Sign in with your @livingstonschools.net account. If you get an error, click back and then select SIGN IN WITH A DIFFERENT ACCOUNT. You will still sign in with your same @livingstonschools.net account though.

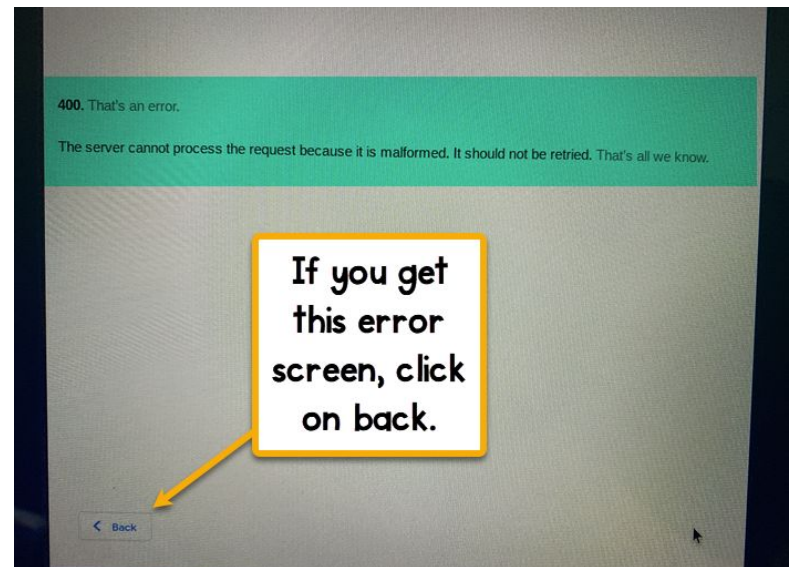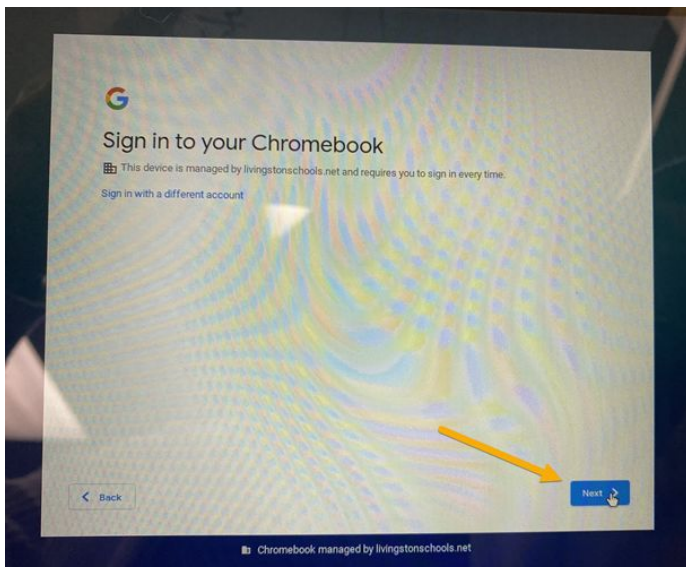

 
If you get this error screen, click on back.

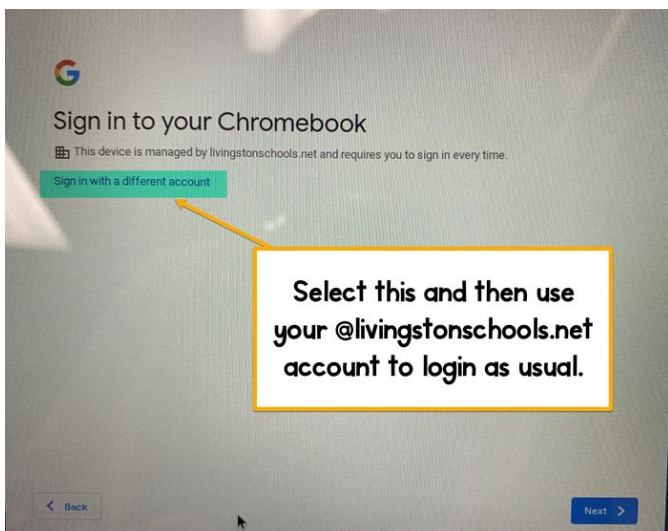

 Select this and then use your @livingstonschools.net account to login as usual.

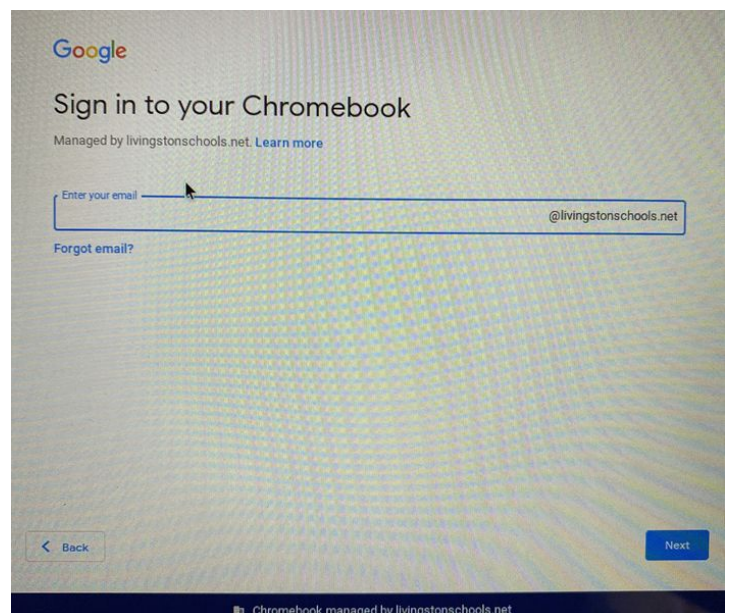

 STEP 7: Sign out when you are finished using the Chromebook. If you don't, the next user will be in your Google account.

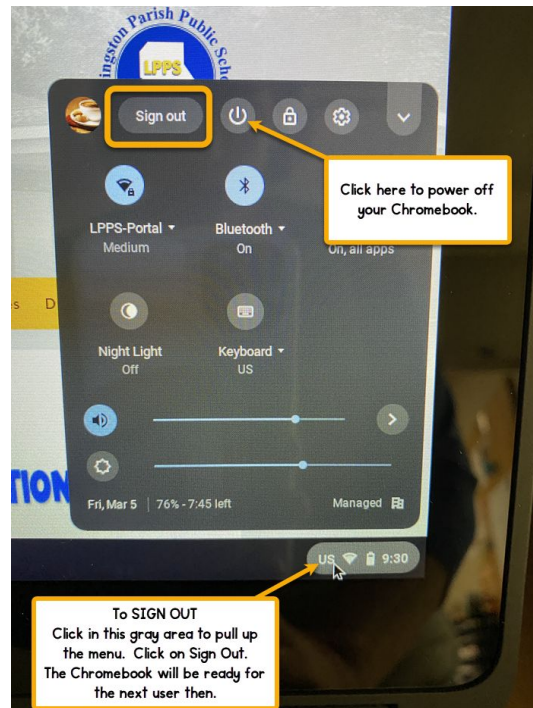

IF YOU RUN INTO AN ERROR:

If for some reason you DO NOT see THIS CHROMEBOOK WILL BE MANAGED BY LIVINGSTONSCHOOLS.NET, you will need to reset the device and go through the steps again.

TO RESET YOUR CHROMEBOOK:

Factory reset your Chromebook

1. Sign out of your Chromebook.
2. Press and hold Ctrl + Alt + Shift + r.
3. Select Restart.
4. In the box that appears, select Powerwash > Continue.
5. Follow the steps that appear and sign in with your Google Account.
6. Once you've reset your Chromebook, follow the directions to enroll with the Enterprise account.